




Instruction Manual

Bracket Arm	Crossbar	Lag Screw	Concrete Anchor	1" Bolt Clip Nut	Rubber Mount

1


Extend bracket arms.

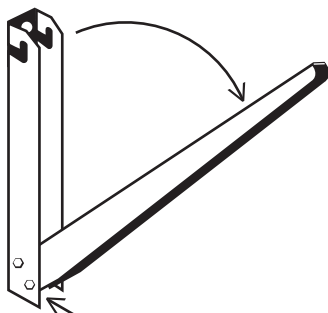

Tighten two bolts on each arm.


2

Level and attach crossbar with two lag screws or anchors provided (Substitute other fastener types where appropriate). Slide extended bracket arms onto crossbar.

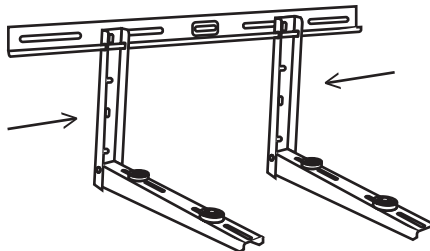


3

Insert clear clip/nut into mounting key hole from below arm. Attach rubber mount through key hole, aligning center hole with clip/nut. Repeat and slide all four mounts to the center of their respective slots.

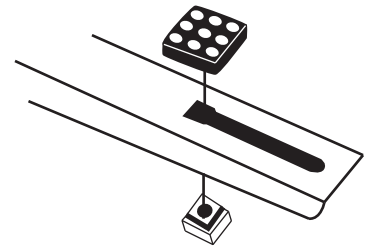


4

Unscrew rubber stand-offs on the back of each arm as needed to level both arms.

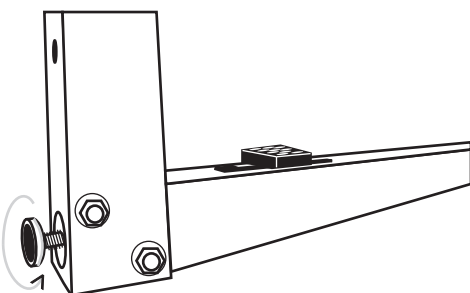

5

Position arms to accommodate equipment measurements and tighten set screws. Use remaining lag screws or anchors to secure bracket arms.

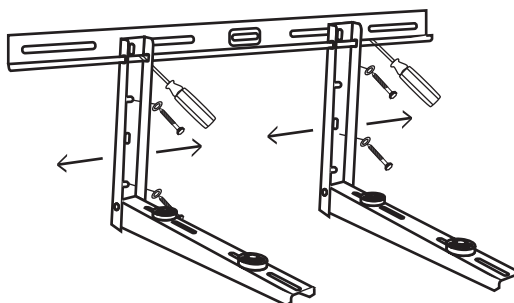

6

Position mounts to accommodate equipment measurements. Place condenser on mounts aligning holes in feet with center hole in mounts. Attach using 4 provided bolts.

